



EN Installation and User Manual

Important information: To prevent damage and improper use, please keep this installation and user manual readily accessible. Please read it carefully before installing or using the shower. Our information sheets and printed materials are provided for guidance based on our best knowledge. The content is provided without legal obligation. In all other respects, our General Terms and Conditions apply.

WELLNESS SOLAR BASIC 20 L

We recommend installing the solar shower on a solid base to ensure stability and safety. Take particular care when using tools on the shower to prevent damage to the shower. We recommend placing a cloth between the shower and any tools to prevent damage.

Installation and Connection of the Solar Shower

1. Choose a sunny location for the shower.
2. Install the shower at the chosen location by securing the base plate using suitable screws and anchors (not included) in the drilled holes.
3. Seal the connecting pipe on both sides with thread seal tape. Wrap the thread seal tape around the threads approximately 16 to 20 times. Then attach the shower head to the shower.
4. Connect your garden hose to the rear connection of the solar shower and the water supply. Ensure the hose is securely attached and cannot come loose from the connection.

First Use of the Shower

1. Before filling the shower, turn the shower faucet to hot to ensure no air remains in the water tank.
2. Turn on the garden hose to fill the shower. It takes about 2-3 minutes to fill the shower.
3. As soon as water starts flowing from the shower head, turn off the shower faucet. The water in the shower tank will then start heating up.
4. Depending on the sunlight and outside temperature, the shower needs 1-2 hours to completely heat the water in the tank.
5. In strong sunlight, the water temperature inside the tank can reach up to 60 °C.

CAUTION: To avoid scalding, always turn the shower faucet to cold (blue) first, then adjust to the desired temperature. If the shower has not been used for more than 3 days, we recommend letting the water run for 2 minutes before use to flush out any stagnant water. This should allow any bacteria that may have developed in the standing water under warm conditions to be flushed out.

Winter Storage

1. Disconnect the hose between the water supply and the solar shower.
2. Remove the drain screw to empty the shower.
3. Dismantle the solar shower and drain any remaining water.
4. Disassemble the individual parts of the shower and store them in a dry place away from direct sunlight. Do not expose the shower to frost.

IMPORTANT:

Never fill the shower when the outside temperature is below 5 °C.

Recommended water pressure: 3.5 bar. Under no circumstances should the shower be operated using an additional pump.