



EN Installation and User Manual

Important information: To prevent damage and improper use, please keep this installation and user manual readily accessible. Please read it carefully before installing or using the shower. Our information sheets and printed materials are provided for guidance based on our best knowledge. The content is provided without legal obligation. In all other respects, our General Terms and Conditions apply.

SPLIT SOLAR SHOWER 35 L

EN Installation and User Manual

Installation Instructions

1. Choose a sunny location for the shower.
2. Secure the shower base plate to a stone or wooden surface using the four screws provided. Use a wrench or other suitable tool (Figure 1).
3. Connect the shower head to the extension pipe and screw both together using the adjust nut on the solar shower. Do not use a wrench, tighten by hand only (Figure 2). Be sure to use the gaskets provided.
4. Place the O-ring into the recess in the lower part of the shower (Figure 3).
5. Place the upper part onto the lower part of the shower. Then connect the internal hoses and tighten them by hand (Figure 3).
6. Turn the locking rings clockwise until the two parts are firmly connected (Figure 3). The shower faucet and the shower head should face in the same direction.

First Use of the Shower

1. Before filling the shower, turn the shower faucet to hot to ensure no air remains in the water tank.
2. Connect the garden hose to the hose connector. Turn on the garden hose to fill the shower. It takes about 4-6 minutes to fill the shower.
3. As soon as water starts flowing from the shower head, turn off the shower faucet. The water in the shower tank will then start heating up.
4. Depending on the sunlight and outside temperature, the shower needs 2 hours to heat the water in the tank.
5. In strong sunlight, the water temperature inside the tank can reach up to 60 °C.

CAUTION: To avoid scalding, always turn the shower faucet to cold (blue) first, then adjust to the desired temperature.

Winter Storage

1. Shut off the water supply to the shower.
2. Turn the shower faucet to hot to allow the water tank and hoses to drain completely (approximately 8-10 minutes). Do not turn the shower faucet while the water tank is draining as this could interrupt the water flow and prevent it from emptying completely.
3. Press the safety catch upward and turn the locking ring counterclockwise. Then disconnect the hose connection inside the tank. Some water may leak out.
4. Once the top part of the shower has been removed, dismantle the lower part and drain the remaining water.
5. Clean and dry the individual parts of the shower.
6. Store the shower in a dry place away from direct sunlight. Store the shower in a frost-free room.

IMPORTANT:

Never use salt or any other antifreeze agents in the shower system. Recommended water pressure: up to 3.5 bar. Under no circumstances should the shower be operated using an additional pump or pressure boosting system. As the water tank heats up in direct sunlight, its contents expand. This may cause water to drip from the shower head. When using the shower for the first time, let the water run for a few minutes to flush out any plastic odors.

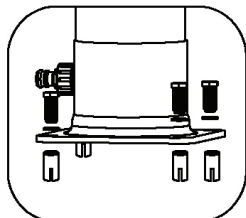 
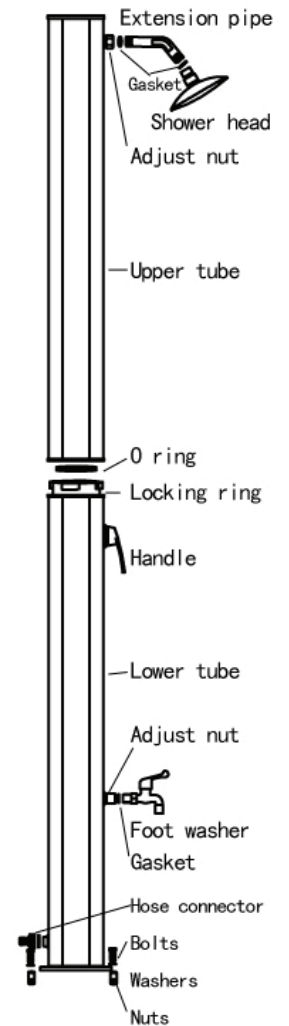 


Figure 1

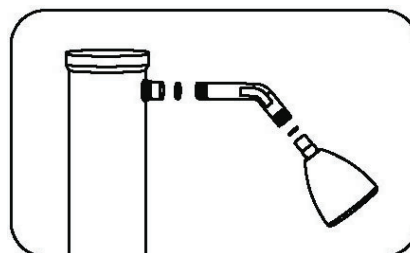 


Figure 2

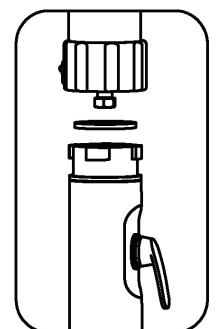 


Figure 3